

| Description | System | Command | Code Standard | Product |
|---|---------------|----------------|----------------------|----------------------------|
| TV 1 system | 0 | 63 | RC5 | Amplifier |
| VCR | 5 | 63 | RC5 | Amplifier |
| SAT 1 system | 8 | 63 | RC5 | Amplifier |
| DVD system | 12 | 63 | RC5 | Amplifier |
| Standby | 16 | 12 | RC5 | Amplifier |
| Master MUTE/DEMUTE | 16 | 13 | RC5 | Amplifier |
| Master Vol UP | 16 | 16 | RC5 | Amplifier |
| Vol Down | 16 | 17 | RC5 | Amplifier |
| Switch into standby (amp only) | 16 | 36 | RC5 | Amplifier |
| Switch out of standby (amp only) | 16 | 59 | RC5 | Amplifier |
| Switch out of standby (whole system) | 16 | 75 | RC5 | Amplifier |
| Switch into standby (whole system) | 16 | 76 | RC5 | Amplifier |
| Turn on amps with CD source selected | 16 | 112 | RC5 | Amplifier |
| Turn on amps with tuner source selected | 16 | 114 | RC5 | Amplifier |
| Turn on amps with DVD source selected | 16 | 116 | RC5 | Amplifier |
| TUNER system | 17 | 63 | RC5 | Amplifier |
| TAPE 1 system | 18 | 63 | RC5 | Amplifier |
| CD system | 20 | 63 | RC5 | Amplifier |
| AUX 1 | 21 | 63 | RC5 | Amplifier |
| TAPE 2 system | 23 | 63 | RC5 | Amplifier |
| Up | 16 | 80 | RC5 | Amplifiers with displays |
| Down | 16 | 81 | RC5 | Amplifiers with displays |
| Menu | 16 | 82 | RC5 | Amplifiers with displays |
| Guide | 16 | 84 | RC5 | Amplifiers with displays |
| Left | 16 | 85 | RC5 | Amplifiers with displays |
| Right | 16 | 86 | RC5 | Amplifiers with displays |
| Select | 16 | 87 | RC5 | Amplifiers with displays |
| 0 | 20 | 0 | RC5 | CD Player |
| 1 | 20 | 1 | RC5 | CD Player |
| 2 | 20 | 2 | RC5 | CD Player |
| 3 | 20 | 3 | RC5 | CD Player |
| 4 | 20 | 4 | RC5 | CD Player |
| 5 | 20 | 5 | RC5 | CD Player |
| 6 | 20 | 6 | RC5 | CD Player |
| 7 | 20 | 7 | RC5 | CD Player |
| 8 | 20 | 8 | RC5 | CD Player |
| 9 | 20 | 9 | RC5 | CD Player |
| CD Standby | 20 | 12 | RC5 | CD Player |
| Skip > | 20 | 32 | RC5 | CD Player |
| Skip < | 20 | 33 | RC5 | CD Player |
| Open/close | 20 | 45 | RC5 | CD Player |
| Pause | 20 | 48 | RC5 | CD Player |
| Scan < | 20 | 50 | RC5 | CD Player |
| Scan > | 20 | 52 | RC5 | CD Player |
| Play | 20 | 53 | RC5 | CD Player |
| Stop | 20 | 54 | RC5 | CD Player |
| Clear | 20 | 58 | RC5 | CD Player |
| Dim Down | 20 | 71 | RC5 | CD Player |
| Switch out of standby | 20 | 112 | RC5 | CD Player |
| Switch into standby | 20 | 113 | RC5 | CD Player |
| Scroll Local Display | 20 | 11 | RC5 | CD Player - not all models |
| Total Shuffle Play | 20 | 28 | RC5 | CD Player - not all models |

| | | | | |
|-----------------------|------|-----|-----|----------------------------|
| Repeat Continuously | 20 | 29 | RC5 | CD Player - not all models |
| Program | 20 | 41 | RC5 | CD Player - not all models |
| Check | 20 | 42 | RC5 | CD Player - not all models |
| A-B Repeat | 20 | 59 | RC5 | CD Player - not all models |
| Display | 12 | 15 | RC5 | DVD Player - all |
| Shuffle | 12 | 28 | RC5 | DVD Player - all |
| Repeat Continuously | 12 | 29 | RC5 | DVD Player - all |
| Skip > | 12 | 32 | RC5 | DVD Player - all |
| Skip < | 12 | 33 | RC5 | DVD Player - all |
| Open/Close | 12 | 45 | RC5 | DVD Player - all |
| Pause | 12 | 48 | RC5 | DVD Player - all |
| Scan < | 12 | 50 | RC5 | DVD Player - all |
| Scan > | 12 | 52 | RC5 | DVD Player - all |
| Play | 12 | 53 | RC5 | DVD Player - all |
| Stop | 12 | 54 | RC5 | DVD Player - all |
| A-B Repeat | 12 | 59 | RC5 | DVD Player - all |
| Dim | 12 | 71 | RC5 | DVD Player - all |
| Up | 12 | 80 | RC5 | DVD Player - all |
| Down | 12 | 81 | RC5 | DVD Player - all |
| Menu | 12 | 82 | RC5 | DVD Player - all |
| Left | 12 | 85 | RC5 | DVD Player - all |
| Right | 12 | 86 | RC5 | DVD Player - all |
| Enter | 12 | 87 | RC5 | DVD Player - all |
| Switch out of standby | 12 | 116 | RC5 | DVD Player - all |
| Switch into standby | 12 | 117 | RC5 | DVD Player - all |
| Title | 12 | 121 | RC5 | DVD Player - all |
| DISPLAY | 21DE | 40 | NEC | DVD Player - all |
| ZOOM | 21DE | 41 | NEC | DVD Player - all |
| <SLOW | 21DE | 44 | NEC | DVD Player - all |
| SLOW> | 21DE | 45 | NEC | DVD Player - all |
| Stop | 21DE | 48 | NEC | DVD Player - all |
| Pause | 21DE | 49 | NEC | DVD Player - all |
| Skip < | 21DE | 50 | NEC | DVD Player - all |
| Skip > | 21DE | 51 | NEC | DVD Player - all |
| REW (<<) | 21DE | 54 | NEC | DVD Player - all |
| FF (>>) | 21DE | 55 | NEC | DVD Player - all |
| Play | 21DE | 58 | NEC | DVD Player - all |
| Open/close | 21DE | 00 | NEC | DVD Player - all |
| SEARCH | 21DE | 01 | NEC | DVD Player - all |
| NTSC/PAL | 21DE | 02 | NEC | DVD Player - all |
| DVD Standby | 21DE | 03 | NEC | DVD Player - all |
| ANGLE | 21DE | 04 | NEC | DVD Player - all |
| 1 | 21DE | 05 | NEC | DVD Player - all |
| 2 | 21DE | 06 | NEC | DVD Player - all |
| 3 | 21DE | 07 | NEC | DVD Player - all |
| AUDIO | 21DE | 08 | NEC | DVD Player - all |
| 4 | 21DE | 09 | NEC | DVD Player - all |
| 5 | 21DE | 0A | NEC | DVD Player - all |
| 6 | 21DE | 0B | NEC | DVD Player - all |
| SUBTITLE | 21DE | 0C | NEC | DVD Player - all |
| 7 | 21DE | 0D | NEC | DVD Player - all |
| 8 | 21DE | 0E | NEC | DVD Player - all |
| 9 | 21DE | 0F | NEC | DVD Player - all |
| 3D | 21DE | 11 | NEC | DVD Player - all |

| | | | | |
|-----------------------|------|----|---------|-------------------------|
| 0 | 21DE | 12 | NEC | DVD Player - all |
| CLEAR | 21DE | 13 | NEC | DVD Player - all |
| UP | 21DE | 14 | NEC | DVD Player - all |
| LEFT | 21DE | 15 | NEC | DVD Player - all |
| RIGHT | 21DE | 16 | NEC | DVD Player - all |
| DOWN | 21DE | 17 | NEC | DVD Player - all |
| TITLE | 21DE | 18 | NEC | DVD Player - all |
| Menu | 21DE | 19 | NEC | DVD Player - all |
| ENTER | 21DE | 1A | NEC | DVD Player - all |
| RETURN | 21DE | 1B | NEC | DVD Player - all |
| Set-up | 21DE | 1C | NEC | DVD Player - all |
| A-B REPEAT | 21DE | 1D | NEC | DVD Player - all |
| MARK | 21DE | 1E | NEC | DVD Player - all |
| PLAY MODE | 21DE | 1F | NEC | DVD Player - all |
| Personal Preference | | 16 | 14 RC5 | T-50 |
| Master Bass UP | | 16 | 22 RC5 | T-50 |
| Master Bass DOWN | | 16 | 23 RC5 | T-50 |
| High Tone Filter | | 16 | 30 RC5 | T-50 |
| Signal Path Scroll | | 16 | 34 RC5 | T-50 |
| Surround Mode | | 16 | 37 RC5 | T-50 |
| Surround Sound | | 16 | 64 RC5 | T-50 |
| Balance Front | | 16 | 65 RC5 | T-50 |
| Balance Rear | | 16 | 66 RC5 | T-50 |
| Test Tone ON/OFF | | 16 | 88 RC5 | T-50 |
| Centre Ch. Vol. UP | | 16 | 102 RC5 | T-50 |
| Centre Ch. Vol. DOWN | | 16 | 103 RC5 | T-50 |
| 0 | | 17 | 0 RC5 | Tuner |
| 1 | | 17 | 1 RC5 | Tuner |
| 2 | | 17 | 2 RC5 | Tuner |
| 3 | | 17 | 3 RC5 | Tuner |
| 4 | | 17 | 4 RC5 | Tuner |
| 5 | | 17 | 5 RC5 | Tuner |
| 6 | | 17 | 6 RC5 | Tuner |
| 7 | | 17 | 7 RC5 | Tuner |
| 8 | | 17 | 8 RC5 | Tuner |
| 9 | | 17 | 9 RC5 | Tuner |
| Tuner Standby | | 17 | 12 RC5 | Tuner |
| Tune Up | | 17 | 30 RC5 | Tuner |
| Search DOWN | | 17 | 31 RC5 | Tuner |
| Manual | | 17 | 36 RC5 | Tuner |
| Stereo/Mono | | 17 | 37 RC5 | Tuner |
| Preset | | 17 | 38 RC5 | Tuner |
| Search | | 17 | 39 RC5 | Tuner |
| Store | | 17 | 41 RC5 | Tuner |
| Dim | | 17 | 71 RC5 | Tuner |
| Switch out of standby | | 17 | 114 RC5 | Tuner |
| Switch out of standby | | 17 | 114 RC5 | Tuner |
| Switch into standby | | 17 | 115 RC5 | Tuner |
| 6 | 00FF | 10 | NEC | Z122 / MDV300 / MXC3000 |
| 5 | 00FF | 11 | NEC | Z122 / MDV300 / MXC3000 |
| 4 | 00FF | 12 | NEC | Z122 / MDV300 / MXC3000 |
| Menu down | 00FF | 13 | NEC | Z122 / MDV300 / MXC3000 |
| Return | 00FF | 14 | NEC | Z122 / MDV300 / MXC3000 |
| Clear | 00FF | 15 | NEC | Z122 / MDV300 / MXC3000 |

| | | | | |
|---------------|------|----|-----|-------------------------|
| 0 | 00FF | 16 | NEC | Z122 / MDV300 / MXC3000 |
| MENU | 00FF | 17 | NEC | Z122 / MDV300 / MXC3000 |
| Video EQ | 00FF | 18 | NEC | Z122 / MDV300 / MXC3000 |
| Prog | 00FF | 19 | NEC | Z122 / MDV300 / MXC3000 |
| GOTO | 00FF | 1A | NEC | Z122 / MDV300 / MXC3000 |
| PLAY | 00FF | 1B | NEC | Z122 / MDV300 / MXC3000 |
| Menu right | 00FF | 1C | NEC | Z122 / MDV300 / MXC3000 |
| Menu up | 00FF | 1D | NEC | Z122 / MDV300 / MXC3000 |
| Menu left | 00FF | 1E | NEC | Z122 / MDV300 / MXC3000 |
| SKIP > | 00FF | 1F | NEC | Z122 / MDV300 / MXC3000 |
| OPEN/CLOSE | 00FF | 2 | NEC | Z122 / MDV300 / MXC3000 |
| Subtitle | 00FF | 4 | NEC | Z122 / MDV300 / MXC3000 |
| SCAN > | 00FF | 40 | NEC | Z122 / MDV300 / MXC3000 |
| REPEAT | 00FF | 42 | NEC | Z122 / MDV300 / MXC3000 |
| A-B | 00FF | 43 | NEC | Z122 / MDV300 / MXC3000 |
| Prog Scan | 00FF | 46 | NEC | Z122 / MDV300 / MXC3000 |
| DISPLAY (OSD) | 00FF | 47 | NEC | Z122 / MDV300 / MXC3000 |
| Set-up | 00FF | 48 | NEC | Z122 / MDV300 / MXC3000 |
| NTSC/PAL | 00FF | 49 | NEC | Z122 / MDV300 / MXC3000 |
| SKIP < | 00FF | 4C | NEC | Z122 / MDV300 / MXC3000 |
| STOP | 00FF | 4D | NEC | Z122 / MDV300 / MXC3000 |
| Audio | 00FF | 5 | NEC | Z122 / MDV300 / MXC3000 |
| PAUSE | 00FF | 50 | NEC | Z122 / MDV300 / MXC3000 |
| SCAN < | 00FF | 54 | NEC | Z122 / MDV300 / MXC3000 |
| Zoom | 00FF | 58 | NEC | Z122 / MDV300 / MXC3000 |
| DVD Standby | 00FF | 59 | NEC | Z122 / MDV300 / MXC3000 |
| Slow > | 00FF | 5D | NEC | Z122 / MDV300 / MXC3000 |
| Angle | 00FF | 6 | NEC | Z122 / MDV300 / MXC3000 |
| 3 | 00FF | 8 | NEC | Z122 / MDV300 / MXC3000 |
| 2 | 00FF | 9 | NEC | Z122 / MDV300 / MXC3000 |
| 1 | 00FF | A | NEC | Z122 / MDV300 / MXC3000 |
| ENTER | 00FF | B | NEC | Z122 / MDV300 / MXC3000 |
| 9 | 00FF | C | NEC | Z122 / MDV300 / MXC3000 |
| 8 | 00FF | D | NEC | Z122 / MDV300 / MXC3000 |
| 7 | 00FF | E | NEC | Z122 / MDV300 / MXC3000 |
| TITLE | 00FF | F | NEC | Z122 / MDV300 / MXC3000 |